

\* NOTE : If wiring the NC889 (with n/c switch) to a 10/20 Zone Call Contoller (NC910/NC920 series), connect the supplied pull-up resistor (8k2) at the call controller between the 'Zone' wiring terminal (Z1, Z2...Z20) and '+V' or '+V SW' terminal.

Approved Document No. DNU8890101 Rev 3

**800 SERIES** 

call system

