

Pulsar

CODE: **EN54-7A17LCD** v.1.1/IV TYPE: EN54 27,6V/7A/2x17Ah/LCD

power supply for fire alarm systems

EN**



"This product is suitable for the systems designed in compliance with the standards EN 54-4 and EN 12101-10"

Requirements	Requirements according to standards	PSU EN54-7A17LCD
External Power Supply failure indication	YES	YES
Two independent power supply outputs protected against short-circuit	YES	YES
Temperature-compensated battery charging	YES	YES
Measurement of the resistance of the battery circuit	YES	YES
Low battery indication	YES	YES
Deep discharge battery protection	YES	YES
Protection against short-circuit of the battery terminals	YES	YES
Blown battery fuse indication	YES	YES
Charging circuit failure indication	YES	YES
Low output voltage indication	YES	YES
High output voltage indication	YES	YES
Indication of power supply failure	YES	YES
Overvoltage protection	YES	YES
Short-circuit protection	YES	YES
Overload protection	YES	YES
Output of collective failure ALARM	YES	YES
EPS technical output	YES	YES
APS technical output	YES	YES
PSU technical output	-	YES
Input of an external failure indication EXTi	-	YES
Controlled relay output EXTo	-	YES
Remote battery test	-	YES
230V AC mains supply voltage measurement	-	YES
LCD optical indication	-	YES
Tamper indicating enclosure opening	-	YES



PSU features:

- In accordance with standards: EN 54-4, EN12101-10
- 27,6V DC/ 7A uninterruptible power supply
- battery housing for two 17Ah/12V batteries
- independently protected outputs AUX1 and AUX2
- high efficiency 82%
- low level of voltage ripple
- microprocessor-based automation system
- intelligent PSU overload protection
- measurement of the resistance of the battery circuit
- automatic temperature-compensated charging
- battery test
- two-stage battery charging process
- accelerated battery charging
- · monitoring of the continuity of the battery circuit
- · monitoring of the battery voltage
- · monitoring of the battery fuse
- monitoring of charging and maintenance of the batteries
- deep discharge battery protection (UVP)
- battery overcharge protection
- battery output protection against short-circuit and reverse connection
- monitoring of the load current
- output voltage control
- fuse monitoring of AUX1and AUX2 outputs
- 230V AC?? mains voltage measurement
- "SERIAL" communication port with implemented MODBUS RTU protocol
- Power Security" is a free application for remote monitoring of power supplies (for PC and Android Phones)
- remote control (options: WiFi, Ethernet, RS485, USB)
- remote battery test (required additional modules)

- cooperation with optional EN54-LB4 or EN54-LB8 fuse modules
- optical indication of PSU overload OVL
- · acoustic indication of failure
- adjustable delay for 230V AC power loss indication
- · relay output of collective failure ALARM
- · input of collective failure EXTi
- · controlled relay output EXTo
- technical inputs/outputs with galvanic isolation
- EPS technical output indicating 230V AC power loss
- PSU technical output indicating PSU failure
- APS technical output indicating battery failure
- · internal memory of PSU operating status
- · optical indication LCD panel
 - readings of electrical parameters, including: voltage, current, resistance of the circuit, mains supply voltage
 - failure indication
 - configuration of the PSU settings from the control panel
 - two levels of password protected access
 - operation memory of the PSU
 - failure memory
 - real time clock with battery backup
- protections:
 - SCP short-circuit protection
 - OLP overload protection
 - OHP overheat protection
 - OVP overvoltage protection
 - Surge protection
 - Antisabotage protection (Tamper)
- closing the enclosure lock
- · convection cooling
- warranty 5 years from the production date

General description

The buffer power supply has been designed for an uninterrupted supply of fire alarm systems, smoke and heat control systems, fire protection equipment and fire automatics requiring stabilized voltage of 24V DC (± 15%). The PSU is fitted with two independently protected outputs AUX1 and AUX2, which supply voltage of 27,6V DC with a total output current:

Continuous operation
Output current Imax a=6A

Instantaneous operation Output current Imax b=7A

In case of power loss, the PSU switches to battery power, providing uninterruptible power supply. The PSU is enclosed in a metal casing (color: RAL 3001 - red) with battery housing for two 17Ah/12V batteries. The PSU works with maintenance-free lead acid batteries made with AGM technology or gel technology.



For the state of the 100007	
Functional class EN 12101-10:2007	A 220\\ A C \\ (4F0\\\)\
Mains supply	230V AC (-15%/+10%)
Current consumption	1,36A @230V AC
Power frequency	50Hz
PSU's power Efficiency	193W
Output voltage at 20 °C	82%
Output voltage at 20 °C	22,0V÷ 27,6V DC – buffer operation 20,0V÷ 27,6V DC – battery-assisted operation
Output current	Continuous operation: Imax a=6A
Output current	Instantaneous operation: Imax b=7A
Maximal resistance of the battery circuit	300m Ohm
Ripple voltage	100mV p-p max.
11 0	I = 65mA
Current consumption by the PSU	I = 55mA – LCD panel backlight off
during battery-assisted operation	Caution! If the power supply is connected with the communication interface or
	fuse module, additional current consumption should be considered.
Battery charging current	1A
Coefficient of temperature compensation of the	-40mV/ °C (-5 °C ÷ 40 °C)
battery voltage	1
Low battery voltage indication	Ubat < 23V, during battery mode
Overvoltage protection OVP	U>30,5V±0,5V - disconnection of the output voltage (AUX+ disconnection),
	automatic return
Short-circuit protection SCP	F8A - F _{AUX1} , F _{AUX2} melting fuse (failure requires fuse replacement)
Overload protection OLP	Hardware - Software
Battery circuit protection SCP and reverse polarity connection	F10A - F _{BAT} melting fuse (failure requires fuse replacement)
Deep discharge battery protection UVP	U<20V (± 2%) – battery disconnection
TAMPER output indicating enclosure opening	Microswitch TAMPER
Technical outputs:	- type – electronic, max 50mA/30V DC, galvanic isolation 1500V _{RMS}
- EPS FLT; indicating AC power failure	- delay time approximately 10s/1m/10m/30m (+/-5%) – configured from the
- El o l'El, maioating Ao power failaic	control panel
- APS FLT; indicating battery failure	- type – electronic, max 50mA/30V DC, galvanic isolation 1500V _{RMS}
- PSU FLT; indicating PSU failure	- type – relay: 1A@ 30VDC/50VAC
- ALARM; indicating collective failure	CAUTION! In Fig.2 the set of contacts shows a potential-free status of the
	relay, which corresponds to power supply failure.
	Voltage "ON" – 10÷30V DC
EXTi technical input	Voltage "OFF" – 0÷2V DC
	Level of galvanic isolation 1500V _{RMS}
EXTo relay output	1A@ 30V DC /50V AC
	- LEDs on the PCB of the power supply unit,
	- LCD panel
	 readings of electrical parameters, including: voltage, current, resistance of the circuit, mains supply voltagefailure indication
Optical indication:	configuration of the PSU settings from the control panel
Optical indication.	2 levels of password protected access
	 operation memory of the PSU – 6144 values
	• failure memo - 2048 events
	real time clock with battery backup
Acoustic indication:	- piezoelectric indicator ~75dB /0,3m
LCD screen battery	3V lithium battery. CR2032
Fuses:	, , , , , , , , , , , , , , , , , , , ,
- F _{MAINS}	T 6,3A / 250V
- F _{BAT}	F 10A / 250V
- F _{AUX1}	F 8A / 250V
- F _{AUX2}	F 8A / 250V
	- USB-TTL "INTU" interface; USB-TTL communication
	- RS485 "INTR" interface; RS485 communication
Additional equipment	- USB-RS485 "INTUR" interface; USB-RS485 communication
(not included)	- Ethernet "INTE" interface; Ethernet communication - WiFi "INTW" interface; WiFi wireless communication
	- RS485-Ethernet "INTRE" interface; RS485-Ethernet communication
Operating conditions	I - RS485-WiFi "INTRW" interface: RS485-WiFi wireless communication
Enclosure	- RS485-WiFi "INTRW" interface; RS485-WiFi wireless communication 2nd environmental class (EN12101-10:2007), -5 °C÷75 °C
	2nd environmental class (EN12101-10:2007), -5 °C÷75 °C Steel plate DC01 1,2mm, color: RAL 3001 (red)
Enclosure dimensions	2nd environmental class (EN12101-10:2007), -5 °C÷75 °C
Enclosure dimensions Net/gross weight	2nd environmental class (EN12101-10:2007), -5 °C+75 °C Steel plate DC01 1,2mm, color: RAL 3001 (red)
	2nd environmental class (EN12101-10:2007), -5 °C+75 °C Steel plate DC01 1,2mm, color: RAL 3001 (red) 420 x 420 x 102 (WxHxD) [mm] (+/- 2)
	2nd environmental class (EN12101-10:2007), -5 °C÷75 °C Steel plate DC01 1,2mm, color: RAL 3001 (red) 420 x 420 x 102 (WxHxD) [mm] (+/- 2) 10,4/11,7 kg
Net/gross weight	2nd environmental class (EN12101-10:2007), -5 °C÷75 °C Steel plate DC01 1,2mm, color: RAL 3001 (red) 420 x 420 x 102 (WxHxD) [mm] (+/- 2) 10,4/11,7 kg 2x17Ah/12V (SLA) max.
Net/gross weight	2nd environmental class (EN12101-10:2007), -5 °C÷75 °C Steel plate DC01 1,2mm, color: RAL 3001 (red) 420 x 420 x 102 (WxHxD) [mm] (+/- 2) 10,4/11,7 kg 2x17Ah/12V (SLA) max.
Net/gross weight Fitting battery Closing	2nd environmental class (EN12101-10:2007), -5 °C ÷ 75 °C Steel plate DC01 1,2mm, color: RAL 3001 (red) 420 x 420 x 102 (WxHxD) [mm] (+/- 2) 10,4/11,7 kg 2x17Ah/12V (SLA) max. 400 x 180 x 95mm (WxHxD) max Key lock Certificate of constancy of performance CNBOP-PIB No 1438-CPR-0385,
Net/gross weight Fitting battery	2nd environmental class (EN12101-10:2007), -5 °C÷75 °C Steel plate DC01 1,2mm, color: RAL 3001 (red) 420 x 420 x 102 (WxHxD) [mm] (+/- 2) 10,4/11,7 kg 2x17Ah/12V (SLA) max. 400 x 180 x 95mm (WxHxD) max Key lock Certificate of constancy of performance CNBOP-PIB No 1438-CPR-0385, certificate of approval CNBOP-PIB No 2174/2014,
Net/gross weight Fitting battery Closing	2nd environmental class (EN12101-10:2007), -5 °C÷75 °C Steel plate DC01 1,2mm, color: RAL 3001 (red) 420 x 420 x 102 (WxHxD) [mm] (+/- 2) 10,4/11,7 kg 2x17Ah/12V (SLA) max. 400 x 180 x 95mm (WxHxD) max Key lock Certificate of constancy of performance CNBOP-PIB No 1438-CPR-0385, certificate of approval CNBOP-PIB No 2174/2014, CE, RoHS, 5 years from the production date
Net/gross weight Fitting battery Closing	2nd environmental class (EN12101-10:2007), -5 °C÷75 °C Steel plate DC01 1,2mm, color: RAL 3001 (red) 420 x 420 x 102 (WxHxD) [mm] (+/- 2) 10,4/11,7 kg 2x17Ah/12V (SLA) max. 400 x 180 x 95mm (WxHxD) max Key lock Certificate of constancy of performance CNBOP-PIB No 1438-CPR-0385, certificate of approval CNBOP-PIB No 2174/2014,

▼ 26°C


R 0,11Ω

TEST



Parameters remote control system.

(additional modules required)

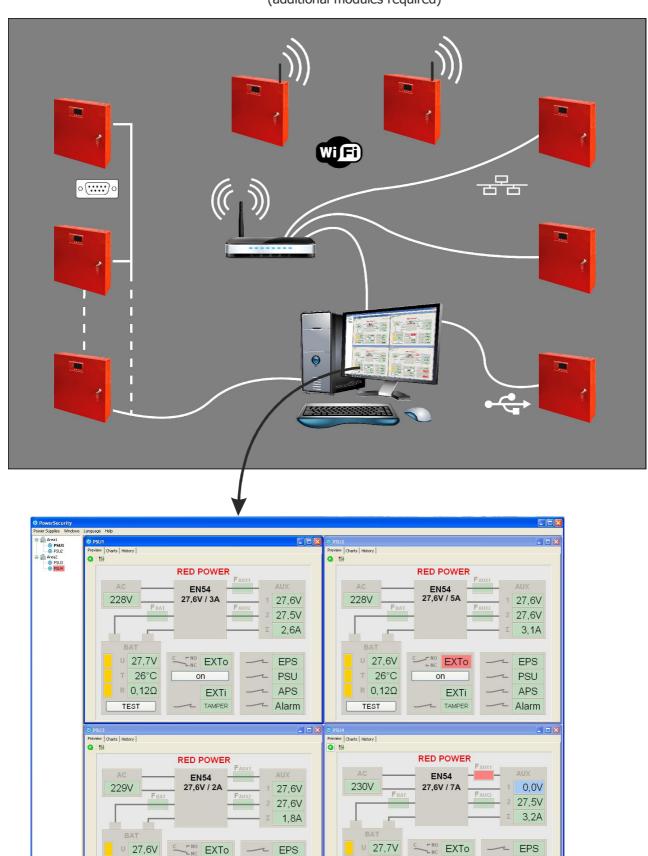

R 0,11Ω

- APS

___ Alarm

EXTi

PSU

APS

~ Alarm

EXTi

TAMPER




Remote monitoring (options: Wi-Fi, Ethernet, RS485, USB).

The PSU has been adjusted to operate in a system that requires a remote control of the parameters in a monitoring centre. Transmitting data concerning PSU status is possible due to an additional, external communication module responsible for communication in Wi-Fi, Ethernet or RS485 standard. It is possible to connect the PSU and the computer via the USB –TTL interface.

Different connection topologies, presented later in this chapter, are only a part of possible communication schemes. More examples can be found in the manuals dedicated to individual interfaces.

Communication via the USB-TTL interface.


The easiest way of communication between the PSU and the computer is provided by the USB-TTL "INTU" interface. This interface allows direct connection between the computer and the PSU and is recognizable by the operating system as a virtual COM port.

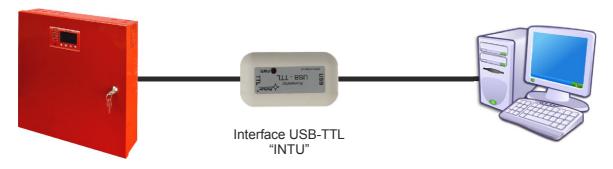

USB-TTL communication using the USB-TTL "INTU" interface.

RS485 network communication.

Another type of network communication is the RS485 communication using two-wire transmission path. To achieve this kind of data exchange, the PSU should be equipped with the additional RS485 TTL "INTR" interface, converting data from the PSU into the RS485 standard and the USB-RS485 "INTUR" interface, converting data from the RS485 network to the USB. Offered interfaces are galvanically isolated and protected against surges.

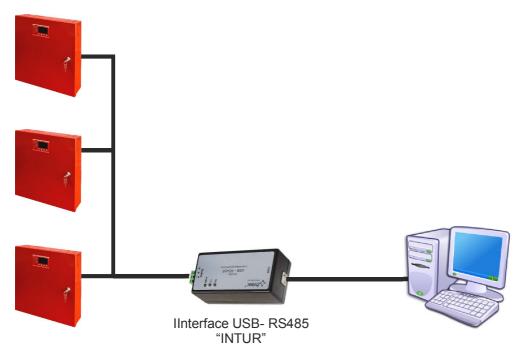


RS485 communication using the "INTR" and "INTUR" interfaces.




ETHERNET network communication.

Communication in the Ethernet network is possible due to the additional interfaces: Ethernet "INTE" and RS485-ETH "INTRE", according to the IEEE802.3 standard.

The Ethernet "INTE" interface features full galvanic isolation and protection against surges. It should be mounted inside the enclosure of the PSU.

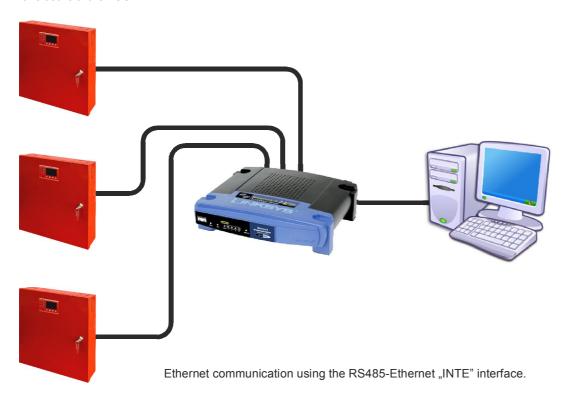

The RS485-ETHERNET "INTRE" interface is a device used to convert signals between the RS485 bus and the Ethernet network. For proper operation, the unit requires an external power supply in the range of 10÷30V DC e.g. drawn from a PSU of the EN54 series. The physical connection of the interface takes place under galvanic isolation. The unit is mounted in a hermetic enclosure protecting against adverse environmental conditions.

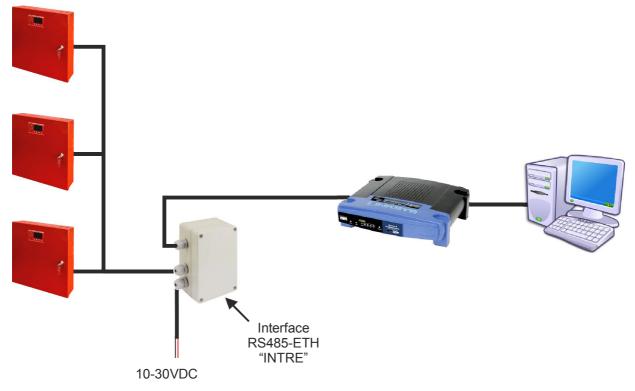


Ethernet communication using the RS485-Ethernet "INTRE" interface.




The Wi-Fi wireless communication.

The Wi-Fi wireless communication can be implemented on the basis of additional interfaces: WI-Fi 'INTW' and RS485-WiFi, operating within 2,4GHz frequency band, according to the IEEE 802.11 bgn standard. The WiFi 'INTW' interface shall be mounted in a selected location inside the enclosure so that the antenna is exposed to the outside.

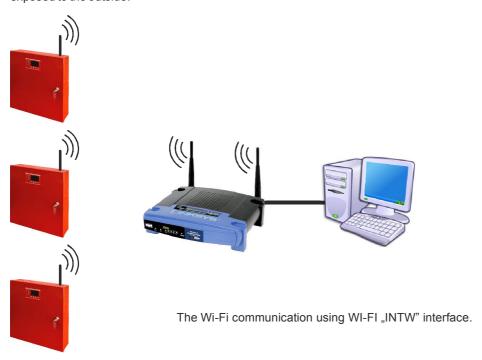

The RS485-WiFi "INTRW" interface is a device used to convert signals between the RS485 bus and the WiFi network. For proper operation, the unit requires an external power supply in the range of 10÷30V DC e.g. drawn from a PSU of the EN54 series. The physical connection of the interface takes place under galvanic isolation. The unit is mounted in a hermetic enclosure protecting against adverse environmental conditions.

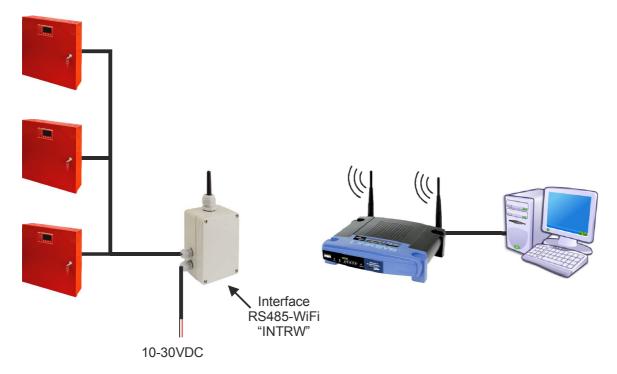


The The Wi-Fi communication using the RS485-WIFI "INTRW" interface.




Fuse modules EN54-LB4 and EN54-LB8

 $Fuse \ modules \ EN54-LB4 \ and \ EN54-LB8 \ allow \ to \ connect \ 4 \ or \ 8 \ receivers \ to \ the \ PSU. \ Output \ state \ is \ indicated \ by \ green \ LEDs.$

Blown fuse signal is transmitted to the input of collective failure EXTi (ALARM) and saved in the internal memory of PSU. The PSU's relay output can also be used for remote control, including external optical indication.

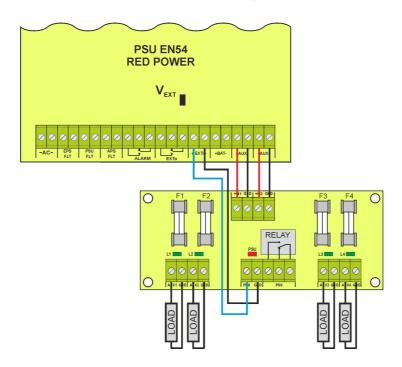

The connection of fuse module: EN54-LB4.

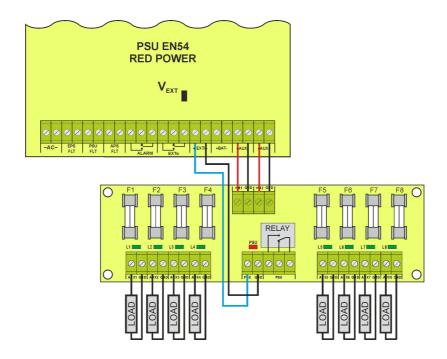

The connection of fuse module: EN54-LB8.